

QUIZBOX SET-UP

Power Supply: The quizbox requires a 12 volt adapter. It can be AC or DC, either polarity. Replacement adapters can be purchased from Quiz Equipment, or at various stores like Radio Shack. The connector size is 5.5 x 2.1.

Black Junction Boxes: Plug the connectors into the back of the quizbox and locate a junction box behind each team.

Quizzers' Seatpads: Position a pad on each quizzer's seat, run the wire out the back, and plug it into the appropriate connector on the junction box. Because the pivot point is toward the back of the seatpad, quizzers should keep their weight on the front when in the seated position.

On / Off Switches: Turn on the switches for all the quizzers that will be participating. Unplugged and unused seatpads have to be turned off.

Tone Switch: Push the rear tone switch to turn off the quizzer beep. Push it a second time to enable the beeps again. The timer beep is not affected.

QUIZBOX OPERATION

Reset: Push the quizbox reset button to clear the system. When all the quizzers' lights are off, release reset; the box is now ready. Note: lights will stay on (or new ones come on) if quizzers are up during reset.

Jumping: The first quizzer to respond will have their light come on. The tone will sound and all other lights will be locked out until reset is pushed. The tone will not sound if quizzers jump during reset.

Ties: If a tie occurs, make sure the tone sounded. If it didn't, the tie was caused by two or more quizzers jumping while reset was pushed, so the display is not valid.

TIMER OPERATION

If someone jumps

- Push **5/10/30** to start the timer. It will count down from 30 and beep.
- Push **HOLD** to hold the time if needed.
- Push **5/10/30** to restart the time if it is on hold.
- Push **RESET** at any time to clear the timer.

If no one jumps

- Push **5/10/30** to start the timer at 5. It will count down to zero and beep. If someone responds before the 5 seconds are up, the timer will stop instantly. If it made it to zero, the quizzer was too late.
- Push **5/10/30** twice to start the timer at 10. It will count down to zero and beep. If someone responds before the 10 seconds are up, the timer will stop instantly. If it made it to zero, the quizzer was too late.
- Push **RESET** at any time to clear the timer.

Time outs

- Push **:45** for a 45 second time out. The timer will count down from 45 and beep.
- Push **:60** for a 60 second time out. The timer will count down from 60 and beep.
- The **HOLD** button will have no effect.
- Push **RESET** at any time to clear the timer.

NOTES

For longest life of the seatpads, take care of their wires - avoid excessive bending and pulling.

Warranty

- 2 years on the quizbox, except for cosmetic damage, abuse or user modification.
- 1 year on the seat pads.

If a problem occurs, please call first: many things can be fixed over the phone or by sending you a part. Payment for return postage and handling (presently \$15.00) will be required if you send a box for repair under warranty.

Quiz Equipment LLC
Steve Kirkman
736 Ashley Dr
Chaska MN 55318
(248) 398-1161