

DIGITAL QUIZBOX SYSTEM

QUIZBOX SETUP

Power: Plug in the AC adapters, one for each quizbox. The light near the lower left corner of the quizbox illuminates when power is on. In an automobile, use an adapter to the lighter socket with a 5.5 x 2.1 plug on the other end of the cable. Polarity doesn't matter. Radio Shack # 270-1533 will work fine.

Quizzers' Handpads: Plug as many as needed into the four sockets on the back of the quizboxes near the top. Unused pads do not have to be plugged in.

Reset Handpad: Plug a handpad into either one of the two lower connectors on the back of one quizbox. It can plug in directly, or through one or two of the extension cables provided. This handpad will reset all the quizboxes that are connected together.

Box Interconnect: Connect boxes together (if desired) using the phono cable with plugs on both ends. Plug one end into the lower connector socket that is not being used by the reset handpad. Plug the other end into either one of the two lower connectors on the next quizbox. To add other quizboxes, continue plugging them together in the same manner with additional phono cables.

QUIZBOX OPERATION

Reset: Push the reset handpad to clear the system. When all the numbers are off, release reset; the quiz system is now ready. Note: Numbers will stay on (or new ones come on) if quizzers are pressing their handpads during reset.

Buzzing In: The first quizzer to press their handpad will have their number register on the display. The buzzer will sound and all other lights will be locked out until reset is pushed.

Buzzer: The buzzer will sound from the box that caused the lock-out. The buzzer will not sound if quizzers push their handpads during reset.

Ties: If a tie occurs, make sure the buzzer sounded. If it didn't, the tie was caused by two or more quizzers responding while reset was pushed, so the display is not valid. If the tie occurred on different quizboxes, make sure the interconnect cable was hooked up to both boxes.

STATUS LIGHTS

Lock-out is the upper light on the left hand side. It illuminates when anyone buzzes in, indicating all others are locked out. The light is kept off during reset since the handpads are not locked out then.

Power is the lower light on the left hand side. It illuminates whenever the box is plugged in.

NOTES

For longest life of the handpads, take care of their wires - avoid excessive bending and pulling.

Replacement AC Adapters can also be purchased at Radio Shack (Part # 273-1652, either polarity).

If a problem occurs, please call first: many things can be fixed over the phone or by sending you a part. Payment for return postage and handling (presently \$7.00) will be required if you send a box for repair under warranty.

WARRANTY

2 years on the quizbox and handpads. That does not include cosmetic damage, user modifications or abuse. **90 days** on the extension and interconnect cables, AC adapters and briefcase. (No workmanship is involved on my part, and I can't control how you treat them.)

Steve Kirkman
703 N. Rembrandt
Royal Oak, MI 48067
(248) 398-1161

kirkmans@aol.com